

ABS DustPump

Dust pump for cleaning bore holes



Use our ABS DustPump to remove dust and small particles from the bore holes. This needs to be done to ensure that your anchorage devices, such as anchorage points, lifeline systems & Co., are securely installed.

If you want to use injection mortar or two-component adhesive, such as our WIT-VM-250 mortar, it is absolutely vital to clean the bore holes first.

- High capacity
- Air chamber length: 42 cm



Accessories / Components

